



Sega Genesis Mini instructions

Set up

1. Place the Sega Genesis Mini near the screen you will connect it to.
2. Plug the included HDMI cable into the back of the device, and plug the other end of it into your screen.
3. Plug in the included Micro-USB cable into the back of the device, and plug the other end of it into the included USB power block.
4. Plug the power block into a power outlet.
5. Plug in at least one of the included 2 USB controllers into either USB-A plug on the front of the device.
6. Turn on the screen and make sure to select the proper HDMI input you plugged the Sega Genesis Mini into.
7. Power on the Sega Genesis Mini by switching the toggle to ON.

Turn on

Slide the toggle to the ON position.

Saving a game

Press and hold the Start button to bring up the ability to save a game to return to later.

Pause a game

Press the Start button to pause a game in the games that allow this function. In two-player games, this may only pause one of the players.

Exit a game

To go back or exit a game, use the Reset button.

Turn off

Switch the toggle to the OFF position.

Answers to other questions

- The volume slider on the Sega Genesis is a non-functional decoration. Use the standard controls for your screen to adjust volume.
- The slot for inserting a game cartridge is a non-functional decoration.
- A plastic piece on the bottom is also decorative, do not remove it.
- The console advertises “high definition graphics” but each game maintains the 16-bit art styles from their original releases.