



Bluetooth Speaker Instructions



Anker Soundcore Flare 2

Instructions

Charging

Lift the flap on the bottom of the rear of the speaker.

Plug the included USB-C cable into the USB-C plug at the bottom.

Insert the other end of the USB-C cable into the USB-C power block.

Plug the USB-C power block into a power outlet.

The **Bass** ^ arrow may occasionally flash during charging.

Do not charge overnight or for long extended periods of time.

Power on/off

Press the power button on the top of the speaker to power it on. The lights will turn on and a rainbow pattern will spin around, and the speakers will make some initial sounds.

Press and hold the power button for 2 seconds to power it off. All sound will stop and the lights will turn off.

Connect over Bluetooth

On the device you will send audio from, make sure Bluetooth is turned on. This can usually be done in your system settings.

Make sure the Soundcore speaker is turned on.

Press the Bluetooth B button on the speaker. When it flashes blue it is in pairing mode ready for a connection. When it is steady blue, Bluetooth is connected.

Go to the settings of your other device and find the Soundcore Flare 2 speaker in the Bluetooth menu. Press it to pair.

Audio controls

Play/Pause - press  X1

Next track - press that same button twice

Previous track - press that same button three times

Bass Boost on/off - press  X1 (sometimes also called BassUp)

Volume up/down - press + or – (louder volumes decrease playback time)

Light effects

Turn on/switch light effects - press  X1 (turning on lights will decrease playback time)

Turn off - press and hold for two seconds 