



Boombox instructions



Turn on

- Plug the power cable into a power outlet.
- Plug the other end into the rear right of the boom box.
- Press the power button on the upper left side of the device.

FM/AM

- Make sure to extend the antenna upwards.
- Press the FM/AM button to turn on the radio.
- Press the FM/AM button again to switch between FM and AM tuning.
- Use the Tune — and + buttons to move between stations
- Close the antenna when you're done.

CD

- Lift the tray open.
- Insert your CD with the label side up until you hear a soft click.
- Close the tray.
- Use the CD PLAY/PAUSE button to play and pause.
-  stops.
- |<< last track.
- >>| next track.
- Press the DISPLAY/ENTER button to display the current track number.
- Press the  button before opening the tray to remove the current disc.



CD playing modes

The default mode is to play tracks in order. Press the PLAY MODE button repeatedly to cycle through playing modes.

1. Single repeat
2. All repeat

3. Selected folder play (MP3 CDs)
4. Selected folder repeat play (MP3 CDs)
5. Shuffle play
6. Program Play - see the included user manual "creating your own program"
7. Program repeat play

Cassette

- Press the  button to eject the cassette tray.
- Insert your cassette tape to align with the guides.
- Close the tray until it gently clicks.
- Press the < button to play.
- Press the || to pause, press it again to resume.
- Press the << button to rewind.
- Press the >> button to fast forward.
- Press the  button to stop playing. And press it again to eject the cassette.

Using with headphones

- Use the CD, CASSETTE, or FM/AM functions to start playing something.
- Plug your headphones into the circular plug on the left side of the device.

Audio in

- Press the Audio In button.
- Connect your source of audio to the plug on the left side of the device.
- Use the device to select and play something.

Volume and Sound

- Use the — and + buttons to adjust the volume.
- Press the MEGA BASS button to boost the bass level of the audio or to turn this off.

Turn off

Press the power button twice to fully turn the boom box off.