



## Canon Rebel T7 DSLR Camera Kit instructions

Please do not detach the lens from the camera body.

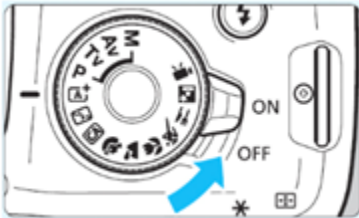

To turn the camera on/off, toggle the switch to do what you want.

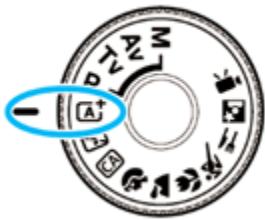

Set the mode dial to  $\langle A^+ \rangle$  (Scene Intelligent Auto). In this setting all the camera settings will be set automatically.




To take a photo, look through the viewfinder and aim the viewfinder center over the subject(s). Press the shutter button halfway to allow the camera to focus on the subject(s).




Press the shutter button completely to take the picture.


## More on image modes

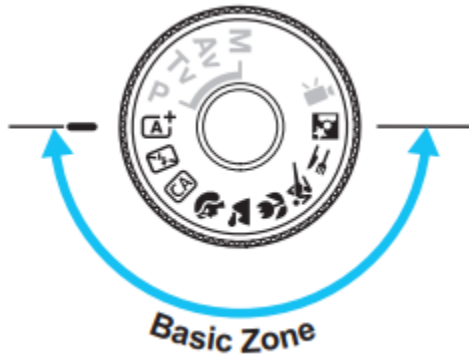

In “Basic Zone” modes, the camera picks all the settings based on what you’re pointing and shooting at. Advanced shooting function settings cannot be changed in these modes.

## Shoot video

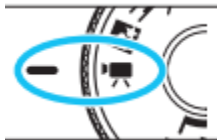


Set the mode dial to  .



Focus on the subject by pressing the shutter button down halfway.



Press the  button to start shooting a movie. To stop, press that same button again.

Recording movie




Built-in microphone


A red circle will display on the screen while video is being recorded. Sound is recorded by the built-in microphone.

## Removing the Battery

Turn the power switch to OFF.

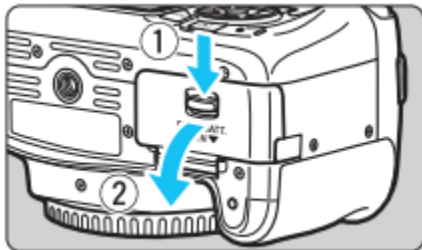


Open the lower right cover.

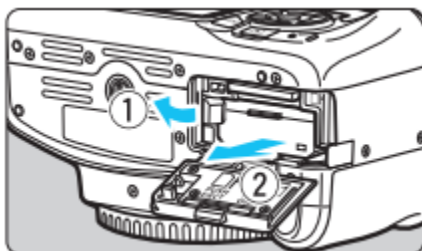


Move the tab on the left further to the left, and the battery should pop out a bit. Remove it all the way for safe storage or charging.

## Remove the SD card

Turn the power switch to OFF.

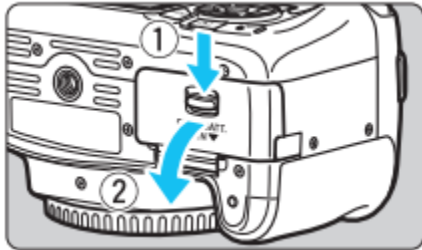

Open the lower right cover.

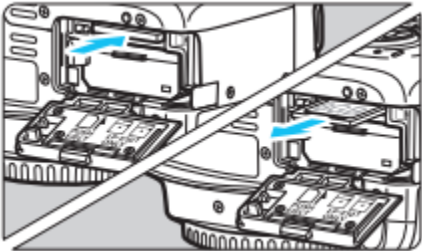

Gently push in the card, and then let it go to eject it for use with a computer or safe storage.

Pull the card straight out.