



Joy-cons instructions

Charging the controllers

Plug the included USB-C charger into a power outlet. Slide the Joy-cons down the rails until they click.

To remove the Joy-cons, press the circle button next to the R or L buttons and slide them off.

Pairing

Pairing using the a Nintendo Switch

Make sure the controllers are charged (see above). Slide the Joy-Cons into the side rails of the Switch to pair them for use.

Wirelessly pair

1. From the Switch home screen, open the Controllers menu.
2. Select Change Grip/Order
3. On the Grip/Order screen, pick up the Joy-con(s) and hold the SYNC button on the inside.
4. They should automatically pair with the Switch and display on that screen for them to be organized.