



Kodak Scanza instructions

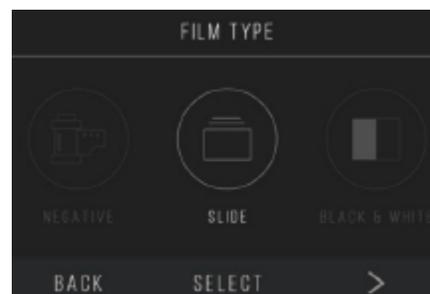


1. Power button: Press and hold to turn the device on and off with its cable plugged in.
2. 3 Function keys: The function is indicated by the text that appears on the screen above the corresponding key.
3. Capture button: Captures the image or brings up the capture view screen.
4. Home button: Takes you back to the home screen.
5. Tilt-up Screen: Displays the image to be captured and scanned as well as functions and settings.

Select settings on the home screen to choose the film type you're digitizing. You can choose between negative, slide, or black & white.

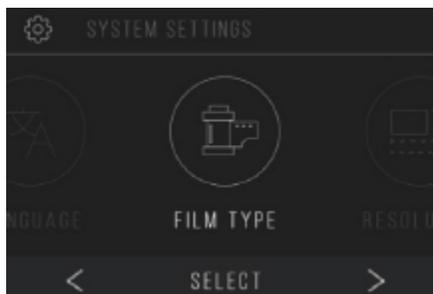

Once your film type has been selected, you will be prompted to select film size. Once the proper film type has been selected, select Save/Exit.

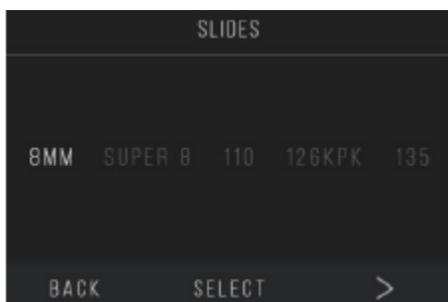

Insert your media into the proper tray. Insert the tray into the scanner. Use the Function keys and capture button to record images.

Transferring content off the Scanza

There are two ways to transfer content off the Kodak Scanza onto your own device:

1. SD card transfer

Push to release the SD card.

Remove the SD card and insert it into an SD card reader on your device.

Pull up the SD card with your standard file system software - File Explorer on Windows PCs, Finder on Apple macOS devices. Use those programs to cut and paste the files to where you want to store them on your device.

2. USB Upload

Plug in the included USB cable to the Kodak Scanza and into your device.

Power the unit on.

Go to Settings. You may first need to press the Home button depending on what was being done on the device last.

Use the > button to go to USB Upload.

It will say "CONNECTING TO COMPUTER" and have a button that says DISCONNECT if you want to change your mind or when you're done to safely remove the device from being on the computer. It will eventually say CONNECTED TO COMPUTER when it has successfully transformed itself into a flash drive for the computer to detect.

Pull up the Kodak Scanza "USB Drive" with your standard file system software - File Explorer on Windows PCs, Finder on Apple macOS devices. Use those programs to cut and paste the files to where you want to store them on your devices.