



Portable Blu-Ray and DVD Player Instructions



Instructions

Charge the battery

1. Push the button on the right edge of the player to the right toward the OFF Position and make sure the indicator light is off.
2. Plug in either the wall power adapter or the car charger to this device and the source of power.

DO NOT CHARGE DURING LIGHTNING STORMS. DO NOT CHARGE OVERNIGHT OR WHILE NOT BEING USED FOR A LONG TIME.

Power on

Push the button on the right edge of the player to the left toward the ON Position.

Power off

Push the button on the right edge of the player to the right toward the OFF Position.

Open the disc drive

DO NOT PRY THE DISC DRIVE OPEN MANUALLY

Beneath the disc drive, slide the OPEN ► tab to the right and then release when the drive opens.

Insert a disc

With the disc drive open, insert your Blu-Ray disc, DVD disc, or music CD disc into the center of the circular drive. Press it down until it gives a slight click.

Close the disc drive. It will make a small click when done correctly.

DISCS WILL NOT PLAY IF THE DRIVE IS NOT CLOSED PROPERLY.

Rotating the screen

The screen can rotate 90° in one direction and 180° in the other direction as labeled by its pivoting joint. It can also tilt up/down 180° to enable it to be perfectly flat if that's desired.



Use the remote control

Point the remote control at the front middle of the player.

Packing the portable Blu-Ray and DVD Player kit

Put the Blu-Ray and DVD Player unit on the bottom and velcro it in.

Place the remote control and the wall power adapter in the open space to the side of the player under the strap.

Wrap up the other cables and put them in the top pouch.

Close the pouch and zip up the case.