



Portable CD Players instructions

Open, load, play

Press the OPEN button to open the CD tray

Load a disc into the player, label side up.

Close the CD tray, it will give a nice click. The see-through piece that shows the CD spinning can be pressed inwards and block the laser from working properly. Make sure it is pushed up to be flush with the outside of the case.

Press the PLAY/PAUSE button to begin playing the loaded CD.

Other controls

Press PLAY/PAUSE to pause, press it again to play after having paused.

Press STOP/OFF to entirely stop a CD that is playing.

|<< and >>| skip between tracks to go back to a previous track and forward to subsequent tracks, respectively.