



Projector Screen instructions


Preparation

Make sure you're in a reasonably flat area, especially if you're outside.

Unzip the case and take out the tripod base. Pull the legs out and downwards until the tripod hub rests on the stopper.

Place the tripod with two legs nearer to where you'll watch.



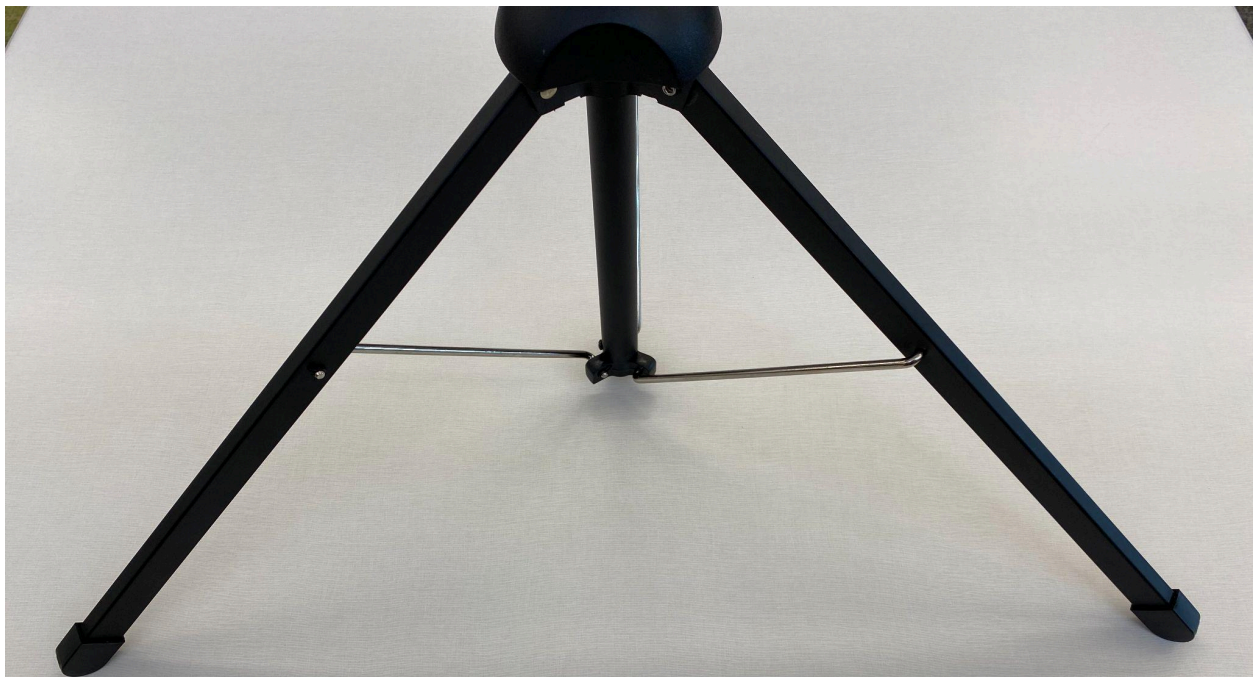

With the screen

Insert the four support rods into the mounting hub with their pegs face forward.





Take the screen out from its cylindrical case. *Do not throw away the foamy end cap of the rod case.*




Place the screen holes on two of the rod pegs, unroll the screen, and place the screen holes through the other two rod pegs. *Don't worry, the fit will be a bit tight.*





Adjust the height of the screen by pulling the latch open behind the screen near the rod hub. Then raise or lower the screen to the height you want. Close the latch at your desired height.

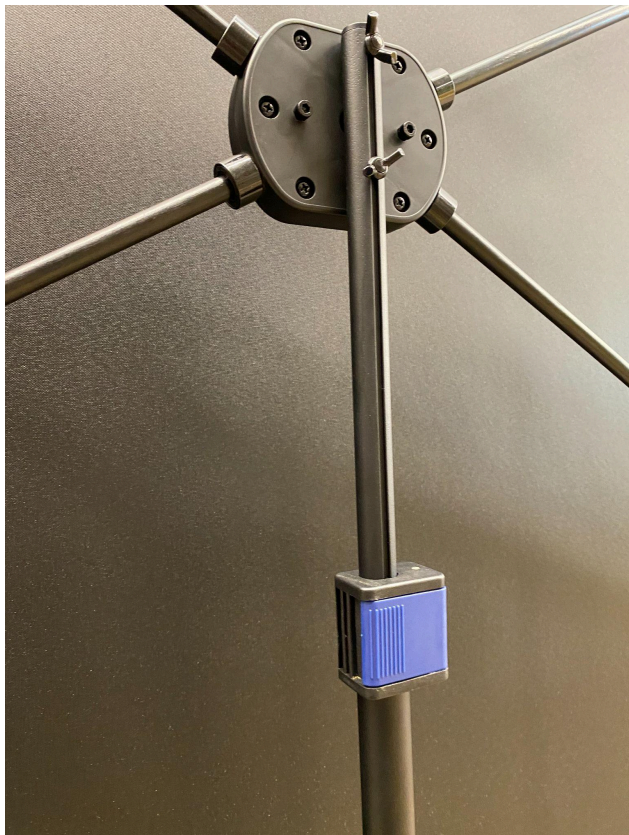

Aim your projector at the screen and enjoy your content!